

STATION13 Skylar

Tent Instructions - Erecting Your New Tent

The Skylar tent is very fast and easy to erect. Simply roll out the inner tent on the ground (make sure that tent entrance zip is fully closed), and peg out the floor at the six pegging points.

With the small tent pole sections slotted together, insert the pole into the allocated top and bottom metal eyelets on the tabs at the foot end of the inner tent, and then peg out the short guyline so the the short pole now stands erect.

Insert the handle of a walking pole into the dedicated pocket at the head end and then peg out the attached guyline so that the inner tent will now stand fully erect (this guyline can be removed once the flysheet is in place).

Note: set the walking pole height to take up the slack of the inner tent, but not so high that it is raising the tent floor, which would put a strain on the tent fabrics. Ground conditions may dictate the most appropriate height to set your walking pole.

Drape the flysheet over the inner tent, locating the small tent pole into the metal eyelet on the inside of the flysheet and peg out accordingly to produce a nice taut shape (again, make sure that the flysheet zip is fully closed). Finally attach and peg out the the four remaining guylines.

The upper air vent can be opened/closed to suit your needs.

**Any problems contact us via our website at: www.station13.co.uk
Email: station13@btinternet.com**